


SPLICE & MILAN

INSTALLATION INSTRUCTIONS



SPLICE & MILAN VANITIES

- Studs / Noggins must be provided for secure mounting. Wall plugs or toggles through tiles/wall sheeting is not suitable. Measure the locations of the brackets so that there is a bracket on each side of the vanity. Vanities 1200 and over will also require a third bracket fixed to the upright in the middle of the cabinet
- Place the rectangular mounting plates behind the main brackets and fasten both to the wall through the mounting holes provided – don't fully tighten screws. Use screws/ fixings suited to the wall construction
- Use the small hex head grub screws to adjust the brackets until level and then fully tighten main screws into the wall. Slide the cabinet over the brackets
- Attach brackets to sides of the cabinet with short timber screws through the holes provided in the sides of the brackets.

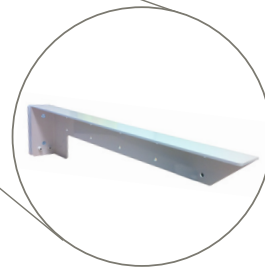

BRACKET IS
TO BE MOUNTED
INSIDE
THE
CABINET

NOTE - IT IS THE RESPONSIBILITY OF THE INSTALLER:

1. To ensure that the wall is of a suitable quality to hold the shelf fixing in place.
2. To use the proper hardware fittings according to the construction of the wall.



SPLICE SHELF

- Studs / Noggins must be provided for secure mounting.
- Place bracket on wall making sure arrow on the bracket body is pointing upwards and fasten brackets to the wall through the mounting holes provided.
- Adjust bracket until level by turning the main stem and then tighten the grub screw at the rear base of the bracket to lock in place.
- Squeeze some silicone into the mounting holes in the shelf and push shelf all the way on to the brackets.
- Allow 24 hours to dry before using shelf.

